PRODUCT DATA SHEET

TOUCHÉ CONTROLS



SMART SWITCH - TWO BUTTON




DESCRIPTION

The two-button Smart Switch provides simple user interfacing for either scene or zone control of a room. On/off and raise/lower commands are available by utilizing two simple buttons. Integral to the device is an LED bar graph indicator that represents the room's or zone's current light level intensity. The tactile, metallic buttons are attractive yet durable. Smart switches communicate on Touché's SmartNet making them incredibly simple to setup.

FEATURES

- Simple two-button interface provides on/off and raise/lower control.
- LED bar-graph indicator provides visual indication of the controlled area's light level.
- Device is part of Touché's auto-addressing network of devices, requiring no dip-switch set-up.
- SmartNet device that connects to the network via simple CAT5 cable.
 Power to the device is via the same CAT5 cable.
- Each switch is software configurable and can be configured in the programming application or wirelessly in the smart phone application.
- Daisy-chaining devices provides three and four-way switching functions in a room or area without software configuration.
- Switches fit into standard 1-gang electrical junction box configurations (4" square box with plaster ring or masonry box). Ganging of multiple switches can be done without any special rough-in considerations.
- The required faceplate (not included) is a standard Decora® wall-plate.
- Out-of-the-box configured as a scene wall station with raise/lower capability.
- Available in five standard colors:

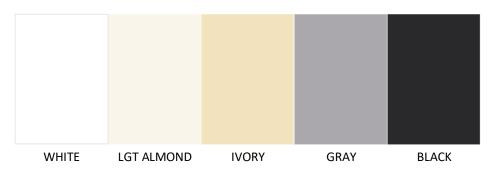


Touché Controls (a Product of ESI Ventures)

A: 2085 Humphrey Street, Fort Wayne, IN 46803 T: 888-841-4356 W: ToucheControls.com Doc: Rev1-1-22

SPECIFICATIONS				
VOLTAGE	24VDC - SOURCED FROM SMART-NET (NO EXTERNAL POWER SUPPLY REQUIRED)			
CONNECTIVITY	CAT5 (MINIMUM)			
LISTINGS	UL916, cUL916			
AMBIENT TEMPERATURE	60C (140F)			
MAXIMUM HUMIDITY	10 - 90%, NON-CONDENSING			

CATALOGUE NUMBER							
DEVICE TYPE		FUNCTION		COLOR			
SS	Smart Switch	2B	2-Button	WHT	White		
				LA	Light-Almond		
				IV	Ivory		
				GRY	Gray		
				BLK	Black		

CONNECTIVITY

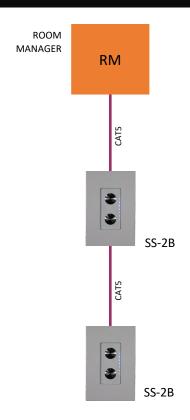

MODES

Scene Mode

- Top button: press and release to turn on.
- Top button: press and hold to raise scene level.
- Bottom button: press and hold to lower scene level.
- Bottom button: press and release to turn off.
- User can choose which preset the top button activates.

Zone Mode

W: ToucheControls.com

- User can select which zone each wall station controls.
- Top button: press and release turns zone on.
- Top button: press and hold to raise zone level.
- Bottom button: press and hold to lower zone level.
- Bottom button: press and release to turn off.
- User can set the level the zone goes to when top button pressed.

Doc: Rev1-1-22