

PRODUCT DATA SHEET

TOUCHÉ CONTROLS



SMART SWITCH - SINGLE FUNCTION



DESCRIPTION

The Single-Function Smart Switch provides simple user interfacing for either scene or zone control of a room. On/off and multi-step commands are available by utilizing a single button. The momentary actuated Decora® type switch provides positive feedback to the user when pressed. Smart switches communicate on Touché's SmartNet making the incredibly simple to setup.

FEATURES

- Simple momentary contact switch provides on/off and multi-step control.
- Device is part of Touché's auto-addressing network of devices, requiring no dip-switch set-up.
- SmartNet device that connects to the network via simple CAT5 cable. Power to the device is via the same CAT5 cable.
- Each switch is software configurable and can be configured in the programming application or wirelessly in the smart phone application.
- Daisy-chaining devices provides three and four-way switching functions in a room or area without software configuration.
- Switches fit into standard 1-gang electrical junction box configurations (4" sq. box with plaster ring or masonry box). Ganging of multiple switches can be done without any special rough-in considerations.
- The required faceplate (not included) is a standard Decora® wall-plate.
- Out-of-the-box configured as a scene wall station.
- Available in five standard colors:



WHITE

LGT ALMOND

IVORY

GRAY

BLACK

Touché Controls (a Product of ESI Ventures)

A: 2085 Humphrey Street, Fort Wayne, IN 46803

T: 888-841-4356

W: ToucheControls.com

Doc: Rev1-1-22

SPECIFICATIONS

VOLTAGE	24VDC - SOURCED FROM SMART-NET (NO EXTERNAL POWER SUPPLY REQUIRED)
CONNECTIVITY	CAT5 (MINIMUM)
LISTINGS	UL916, cUL916
AMBIENT TEMPERATURE	60C (140F)
MAXIMUM HUMIDITY	10 - 90%, NON-CONDENSING

CATALOGUE NUMBER

DEVICE TYPE	BUTTON QTY	COLOR
SS Smart Switch	SF Single-Function	WHT White
		GRY Gray
		IV Ivory
		LA Light Almond
		BLK Black

MODES


Scene Mode

- Press and release to turn on selected scene preset.
- Press and release to turn off selected scene.
- User can choose which preset scene the “on” state activates.

Zone Mode

- User can select which zone each smart switch controls.
- Press and release to turn on selected zone preset.
- Press and release to turn off selected zone.
- User can choose which preset zone the “on” state activates.

CONNECTIVITY

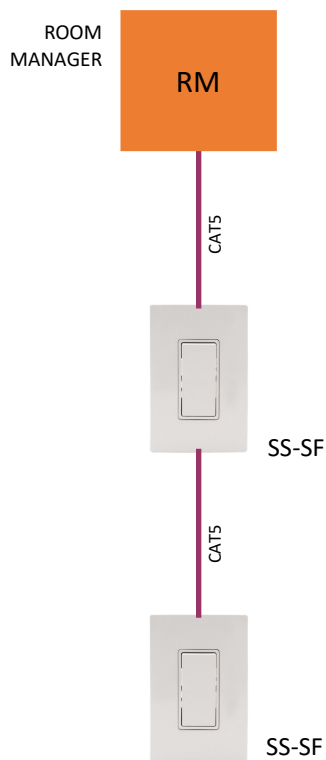

Touché Controls (a Product of ESI Ventures)

A: 2085 Humphrey Street, Fort Wayne, IN 46803 T: 888-841-4356

W: ToucheControls.com

Doc: Rev1-1-22